Smartlock SL900 Mifare® Stand Alone Lock Instructions

	Function	Instruction	Indication
1	Start	Place hand in front of window.	●1☆1☆1☆
	Mode /	(to reset the lock to this mode short the 2 pads of	
	Reset /	J3 on the top right of circuit board under the	(when battery in)
	Delete	battery cover. Whilst still shorted remove a	
	Program	battery for 20s. Replace the battery and then	
	Card	remove the short)	
2	Initialize	Make sure lock is in 'Start Mode' as above.	
	Program	Mark a card 'Program Card' and place within	●1☆1☆1☆
	Card /	2cm of the reader and remove immediately after	
	Ready	☼. The lock is now in 'Ready Mode'	
	Mode	Place hand in front of window	●1
3	Add	Place 'Program Card' within 2cm of the reader to	•1
	User	enter Program Mode. Remove immediately after	
	Card/	first ●♪	●♪ 5sec x8
	Program	Place a new card within 2cm of the reader.	☆1
	Mode	Repeat with up to 200 cards while in Program	
		Mode.	
		The card/s are now ready to use after the lock	
		has automatically returned to ready mode.	
4	Delete	Place 'Program Card' within 2cm of the reader	
	User	and hold there to enter delete mode. Remove	
	Card /	after the ☆♪x5fast.	●♪ 5sec x8
	Delete	Place a card to delete within 2cm of the reader.	
	Mode	This card is now deleted from use.	☆1
		Repeat with any user cards you wish to delete.	
		The lock will automatically return to ready mode.	
5	Delete	Enter 'Delete Mode' as 4 above.	
	All User		●♪ 5sec x8
	Cards	Place program card within 2cm of the reader and	
		hold there to delete all cards.	☆ ••
	_	The lock will automatically return to ready mode.	146.
6	To open	Place user card within 2cm of the reader and	☆1 •
		open the door.	
		(if deleted or not added Mifare card)	•1
		(if not a Mifare card)	☼

Please ensure that you store the Program Card in a safe place – you will need it every time that you need to add a new user card. If it is lost you will have to reset the lock and re-add all the user cards

Key;- ● = red light
⇒ = green light
⇒ = green flash
⇒ = continuous note
⇒ = beep